



QutePC-1010

0.6-Liter Nettop with Intel® Atom Processor D410/510

User's Guide



Revision	Date	Edited by	Changes
1.0	2010/10/13	Zack	Initial Release

Content

Content	3
Figures & Tables.....	4
Safety Instructions	5
Before You Begin	5
When Working Inside a Computer.....	5
Preventing Electrostatic Discharge	6
Instructions for Lithium Battery	7
Voltage Ratings	7
Preface	8
How to Use This Guide	8
Unpacking	8
Regulatory Compliance Statements.....	8
Warranty Policy.....	9
Maintaining Your Computer.....	10
Chapter 1 Introduction	13
Overview	13
Product Specifications.....	14
System tour	15
Chapter 2 Getting Started	19
Setting up your PC	19
Mounting your PC to a monitor.....	21
Anti-theft protection with a Kensington Lock	22
Computer Stand	23
Driver Installation	24
Chapter 3 AMI BIOS Setup.....	25
Overview	25
Main Menu	26
Advanced Menu	27
Boot Menu	29
Chipset Menu	30
Power Menu	31
Security Menu.....	32
Exit Menu	32

Figures & Tables

Figure 1 Front Panel.....	15
Figure 2 Rear Panel.....	17
Figure 3 Connect the VGA cable	19
Figure 4 Network cable with RJ45 connector	19
Figure 5 Connecting USB mouse & keyboard	20
Figure 6 Turing on the system.....	20
Figure 7 VESA mounting (1)	21
Figure 8 VESA mounting (2)	21
Figure 9 Use a Kensington lock.....	22
Figure 10 Computer Stand	23
Figure 11 Stand Dimension	23
Table 1 QutePC-1010 product specifications	14
Table 2 BIOS Main Menu	26
Table 3 IDE Device Setting Menu	26
Table 4 System Information	27
Table 5 Advanced Menu	27
Table 7 OnBoard Peripherals Configuration Settings	28
Table 8 Hardware Health Configuration.....	29
Table 9 Boot Menu	29
Table 10 Chipset Menu.....	30
Table 11 Power Menu	31
Table 12 Security Menu	32
Table 13 Exit Menu	32

Safety Instructions

■ Before You Begin

Before handling the product, read the instructions and safety guidelines on the following pages to prevent damage to the product and to ensure your own personal safety. Refer to the “Advisories” section in the Preface for advisory conventions used in this user’s guide, including the distinction between Warnings, Cautions, Important Notes, and Notes.

- Always use caution when handling/operating a computer. Only qualified, experienced, authorized electronics service personnel should access the interior of a computer. The power supplies produce high voltages and energy hazards, which can cause bodily harm.
- Use extreme caution when installing or removing components. Refer to the installation instructions in this user’s guide for precautions and procedures. If you have any questions, please contact our Post-Sales Technical Support.
- Access can only be gained by service persons or by users who have been instructed about the reasons for the restrictions applied to the location and about any precautions that shall be taken; and access is through the use of a tool or lock and key, or other means of security, and is controlled by authority responsible for the location.

WARNING



High voltages are present inside the chassis when the unit’s power cord is plugged into an electrical outlet. Turn off system power, turn off the power supply, and then disconnect the power cord from its source before removing the chassis cover. Turning off the system power switch does not remove power to components.

■ When Working Inside a Computer

Before taking covers off a computer, perform the following steps:

1. Turn off the computer and any peripherals.
2. Disconnect the computer and peripherals from their power sources or subsystems to prevent electric shock or system board damage. This does not apply when hot

swapping parts.

3. Follow the guidelines provided in “Preventing Electrostatic Discharge” on the following page.
4. Disconnect any telephone or telecommunications lines from the computer.

In addition, take note of these safety guidelines when appropriate:

- To help avoid possible damage to system boards, wait five seconds after turning off the computer before removing a component, removing a system board, or disconnecting a peripheral device from the computer.
- When you disconnect a cable, pull on its connector or on its strain-relief loop, not on the cable itself. Some cables have a connector with locking tabs. If you are disconnecting this type of cable, press in on the locking tabs before disconnecting the cable. As you pull connectors apart, keep them evenly aligned to avoid bending any connector pins. Also, before connecting a cable, make sure both connectors are correctly oriented and aligned.

CAUTION



Do not attempt to service the system yourself except as explained in this user's guide. Follow installation and troubleshooting instructions closely.

■ Preventing Electrostatic Discharge

Static electricity can harm system boards. Perform service at an ESD workstation and follow proper ESD procedure to reduce the risk of damage to components. We strongly encourage you to follow proper ESD procedure, which can include wrist straps and smocks, when servicing equipment.

You can also take the following steps to prevent damage from electrostatic discharge (ESD):

- When unpacking a static-sensitive component from its shipping carton, do not remove the component's antistatic packing material until you are ready to install the component in a computer. Just before unwrapping the antistatic packaging, be sure you are at an ESD workstation or grounded. This will discharge any static electricity that may have built up in your body.
- When transporting a sensitive component, first place it in an antistatic container or packaging.
- Handle all sensitive components at an ESD workstation. If possible, use antistatic floor pads and workbench pads.
- Handle components and boards with care. Don't touch the components or contacts

on a board. Hold a board by its edges or by its metal mounting bracket.

- Do not handle or store system boards near strong electrostatic, electromagnetic, magnetic, or radioactive fields.

■ Instructions for Lithium Battery



WARNING

Danger of explosion when battery is replaced with incorrect type. Only replace with the same or equivalent type recommended by the manufacturer.

Do not dispose of lithium batteries in domestic waste. Dispose of the battery according to the local regulations dealing with the disposal of these special materials (e.g. to the collecting points for disposal of batteries)

■ Voltage Ratings

The external power adaptor of the QutePC-1010 has the following voltage ratings:

- Input: 100-240 VAC, 50-60 Hz
- Output: 40W, +19Vdc, 2.1A

Power Supplies:

Bestec BPA-3601WW-19V

Preface

■ How to Use This Guide

This guide is designed to be used as step-by-step instructions for installation, and as a reference for operation, troubleshooting, and upgrades.

NOTE



Please contact with your nearest Sales representative for driver downloads and additional information availabilities.

■ Unpacking

When unpacking, follow these steps:

1. After opening the box, save it and the packing material for possible future shipment.
2. Remove all items from the box. If any items listed on the purchase order are missing, notify our customer service immediately.
3. Inspect the product for damage. If there is damage, notify our customer service immediately. Refer to “Warranty Policy” for the return procedure.

■ Regulatory Compliance Statements

This section provides the FCC compliance statement for Class B devices.

FCC Compliance Statement:

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reason able protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radiofrequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television equipment reception, which can be determined by turning the equipment off and on, the user is encouraged to

try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by us could void the user's authority to operate the equipment.

NOTE



The assembler of a personal computer system may be required to test the system and/or make necessary modifications if a system is found to cause harmful interference or to be noncompliant with the appropriate standards for its intended use.

■ Warranty Policy

Limited Warranty

Please consult your distributor for warranty verification.

The limited warranty is void if the product has been subjected to alteration, neglect, misuse, or abuse; if any repairs have been attempted by anyone other than us or its authorized agent; or if the failure is caused by accident, acts of God, or other causes beyond the control of us or the manufacturer. Neglect, misuse, and abuse shall include any installation, operation, or maintenance of the product other than in accordance with the user's guide.

No agent, dealer, distributor, service company, or other party is authorized to change, modify, or extend the terms of this Limited Warranty in any manner whatsoever. We reserves the right to make changes or improvements in any product without incurring any obligation to similarly alter products previously purchased.

Return Procedure

For any Limited Warranty return, please contact Support with us and login to obtain a Return Material Authorization (RMA) Number.

All product(s) returned to us for service or credit must be accompanied by a Return Material Authorization (RMA) Number. Freight on all returned items must be prepaid by

the customer who is responsible for any loss or damage caused by common carrier in transit. Returns for Warranty must include a Failure Report for each unit, by serial number(s), as well as a copy of the original invoice showing the date of purchase. To reduce risk of damage, returns of product must be in an original shipping container. If the original container has been lost or damaged, new shipping containers may be obtained from our Customer Service at a nominal cost. We own all parts removed from repaired products. We use new and reconditioned parts made by various manufacturers in performing warranty repairs and building replacement products. If we repair or replace a product, its warranty term is not extended. Shipments not in compliance with this Limited Warranty Return Policy will not be accepted by us.

Limitation of Liability

In no event shall we be liable for any defect in hardware, software, loss, or inadequacy of data of any kind, or for any direct, indirect, incidental, or consequential damages in connection with or arising out of the performance or use of any product furnished hereunder. Our liability shall in no event exceed the purchase price of the product purchased hereunder. The foregoing limitation of liability shall be equally applicable to any service provided by us or its authorized agent.

■ **Maintaining Your Computer**

Environmental Factors

■ **Temperature**

The ambient temperature within an enclosure may be greater than room ambient temperature. Installation in an enclosure should be such that the amount of air flow required for safe operation is not compromised. Consideration should be given to the maximum rated ambient temperature. Overheating can cause a variety of problems, including premature aging and failure of chips or mechanical failure of devices. If the system has been exposed to abnormally cold temperatures, allow a two-hour warm-up period to bring it up to normal operating temperature before turning it on. Failure to do so may cause damage to internal components, particularly the hard disk drive.

■ **Humidity**

High-humidity can cause moisture to enter and accumulate in the system. This moisture can cause corrosion of internal components and degrade such properties as electrical resistance and thermal conductivity. Extreme moisture buildup inside the

system can result in electrical shorts, which can cause serious damage to the system. Buildings in which climate is controlled usually maintain an acceptable level of humidity for system equipment. However, if a system is located in an unusually humid location, a dehumidifier can be used to maintain the humidity within an acceptable range. Refer to the “Specifications” section of this user’s guide for the operating and storage humidity specifications.

■ Altitude

Operating a system at a high altitude (low pressure) reduces the efficiency of the cooling fans to cool the system. This can cause electrical problems related to arcing and corona effects. This condition can also cause sealed components with internal pressure, such as electrolytic capacitors, to fail or perform at reduced efficiency.

Power Protection

The greatest threats to a system’s supply of power are power loss, power spikes, and power surges caused by electrical storms, which interrupt system operation and/or damage system components. To protect your system, always properly ground power cables and one of the following devices.

■ Surge Protector

Surge protectors are available in a variety of types and usually provide a level of protection proportional with the cost of the device. Surge protectors prevent voltage spikes from entering a system through the AC power cord. Surge protectors, however, do not offer protection against brownouts, which occur when the voltage drops more than 20 percent below the normal AC line voltage level.

■ Line Conditioner

Line conditioners go beyond the overvoltage protection of surge protectors. Line conditioners keep a system’s AC power source voltage at a fairly constant level and, therefore, can handle brownouts. Because of this added protection, line conditioners cost more than surge protectors. However, line conditioners cannot protect against a complete loss of power.

■ Uninterruptible Power Supply

Uninterruptible power supply (UPS) systems offer the most complete protection against variations on power because they use battery power to keep the server running when AC power is lost. The battery is charged by the AC power while it is available, so when AC power is lost, the battery can provide power to the system for a

limited amount of time, depending on the UPS system.

UPS systems range in price from a few hundred dollars to several thousand dollars, with the more expensive units allowing you to run larger systems for a longer period of time when AC power is lost. UPS systems that provide only 5 minutes of battery power let you conduct an orderly shutdown of the system, but are not intended to provide continued operation. Surge protectors should be used with all UPS systems, and the UPS system should be Underwriters Laboratories (UL) safety approved.

Chapter 1

Introduction

■ Overview

The QutePC-1010 is mini PC with a volume of just 0.6-liter desktop that will satisfy the daily computing needs. The system is designed with the latest Intel Atom D410/D510 processor which provides the excellent computing performance and great energy-saving. The system is supported with Intel NM10 chipset, and DDR2 SO-DIMM up to 2GB. Featured are a 2.5" SATA hard drive and Power eSATA,

Checklist

- QutePC-1010
- Power Adapter
- Power Cord
- Desktop Stand
- Driver CD
- Quick installation Guide
- *Optional VESA Mounting Kit (with 4x M4X6 flat head screws)*

Features

- Ultra Quiet, Ultra Small, Ultra-Low Power
- Intel® Atom D410/D510 Processor (D410 Single core, 512K Cache, 1.66 GHz / D510 Dual core, 1M Cache, 1.66GHz)
- Intel® NM10 Express chipset
- Support DDR2 667 SODIMM up to 2GB
- 1x VGA, 1x GbE and 1x Power eSATA and USB combo connector
- 2.5" (6.35cm)SATA HDD, 3-in-1 (SD/MCC/MS) card reader and 3x USB

■ Product Specifications

Construction	Plastic Housing
System Board	Proprietary motherboard, Intel® Atom D410/D510 Processor with NM10 Express chipset
Memory	DDR2 667 SO-DIMM up to 2GB
I/O Panel	Front I/O panel 1x Phone Jack for Line-Out 1x Phone Jack for MIC-In 1x Push button for power on/off 1x POWER LED 1x HDD LED 1x Wifi LED 1x USB2.0 1x Power eSATA and USB combo connector 1x 3 in 1 card reader (SD / MCC / MS) Rear I/O panel 1x DC JACK, DC+19V input 1x D-SUB 15 connector 2x USB2.0 1x RJ-45, GbE port 1x push button for reset CMOS
Storage	1 x 2.5" SATA HDD
Wireless	1x WLAN mini PCIe card (optional) Or 1x 3G module mini PCIe card (optional)
Power Supply	Input: 100-240 VAC, 50-60 Hz Output: 40W, +19VDC/2.1 A output
Expansion Slot	1 x Mini PCI-Express Socket (for optional WiFi or 3G)
Cooling	System Fan
Temperature/ Humidity	Operating: 0°C to 40°C, 0%-90%, non-condensing Storage: -20°C to 80°C, 0%-90%, non-condensing
Dimensions	3.90 x 13.00 x 11.50 cm (1.54 x 5.12 x 4.53 inches)
Weight	650 g
Mounting	Desktop, VESA-mount
Others	Kensington Lock support
Certification	CE(EMC), FCC Class B

Table 1 QutePC-1010 product specifications

■ System tour

Refer to the diagrams below to identify the components of the system.

■ Front Panel

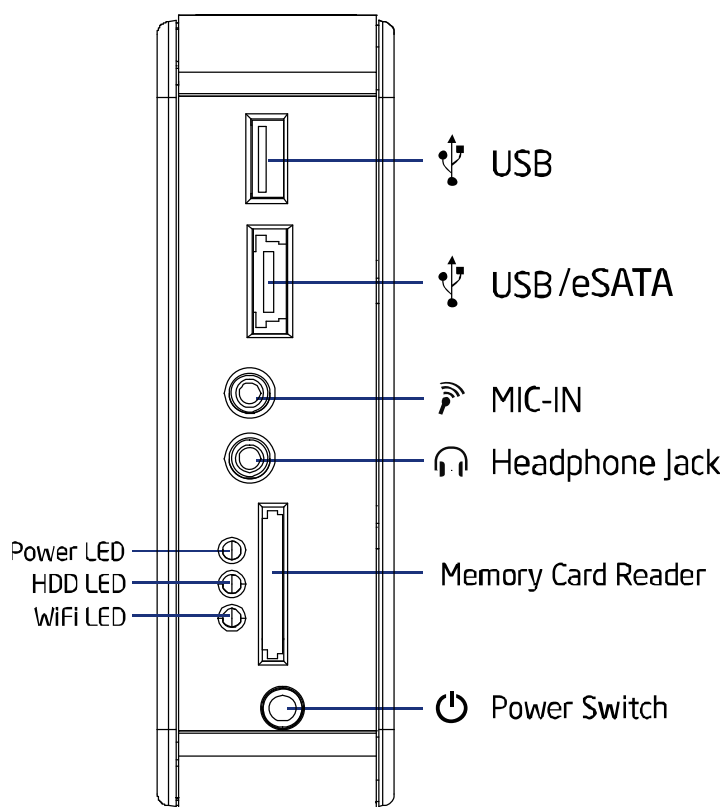


Figure 1 Front Panel



USB

The USB (Universal Serial Bus) port is compatible with USB devices such as keyboards, mouse devices, cameras, and hard disk drives. USB allows many devices to run simultaneously on a single computer, with some peripheral acting as additional plug-in sites or hubs.

eSATA **Power eSATA**

The Power eSATA connector provides an external connectivity for mass storage devices.



MIC-IN

The microphone jack is designed to connect the microphone used for video

conferencing, voice narrations, or simple audio recordings.



Headphone Jack

The stereo headphone jack (3.5mm) is used to connect the system's audio out signal to amplified speakers or headphones.



MMC/MS/SD Memory Card Reader

The built-in memory card reader supports MMC/MS/SD cards used in devices like digital cameras, MP3 players, mobile phones, and PDAs.



Power LED

The power LED will light when the PC is power-on.



HDD LED

The hard disk LED blinks when data is being written into or read from the HDD and Card reader.



WiFi LED

When the data is transferring, the WiFi LED will blink.



Power Switch

The power switch allows powering ON and OFF the system.

■ Rear Panel

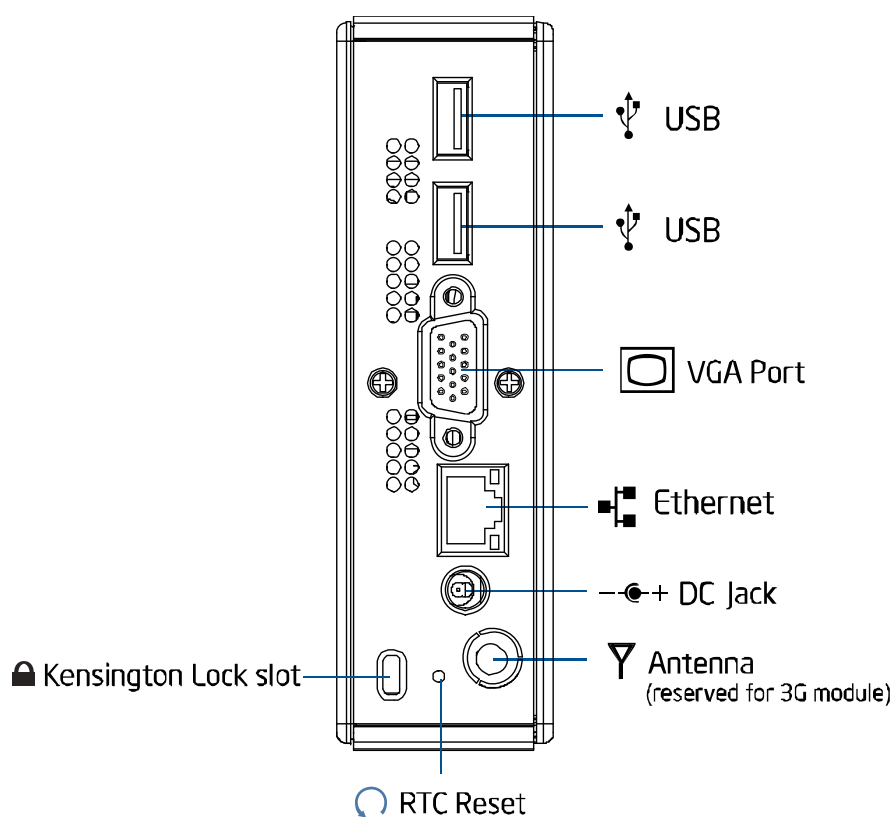


Figure 2 Rear Panel



USB

The USB (Universal Serial Bus) port is compatible with USB devices such as keyboards, mouse devices, cameras, and hard disk drives. USB allows many devices to run simultaneously on a single computer, with some peripheral acting as additional plug-in sites or hubs.



VGA Port

The 15-pin VGA connector is common to computer monitors, and TV sets that support VGA-connector devices.



Ethernet

The eight-pin RJ-45 LAN port supports a standard Ethernet cable for connection to a local network.



DC Jack

The supplied power adapter converts AC power to DC for use with this jack. Power supplied through this jack supplies power to the PC. To prevent damage to the PC, always use the supplied power adapter.



RTC Reset (CMOS Reset)

To clear the CMOS, use the tip of a pen to press the Reset button briefly (for less than three seconds).



Antenna Connector

This SMA connector is used for external 3G antenna. (Optional for 3G/3.5G application)



Kensington Lock Slot

The slot is used for attaching a lock-and-cable apparatus. Locks are generally secured in place with a key or combination lock attached to a rubberized metal cable.

Chapter 2

Getting Started

■ Setting up your PC

■ Connecting the monitor

Connect the VGA cable from your display to the VGA port.

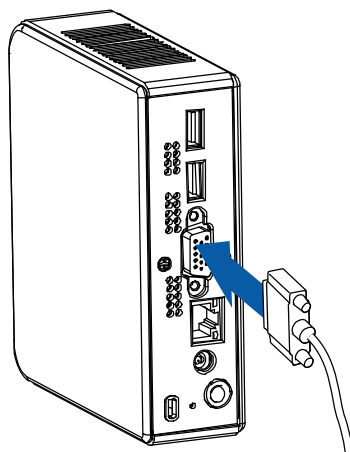


Figure 3 Connect the VGA cable

■ Connecting to a network device

Connect one end of a network cable to the LAN port on the system rear panel and the other end to a hub or switch.

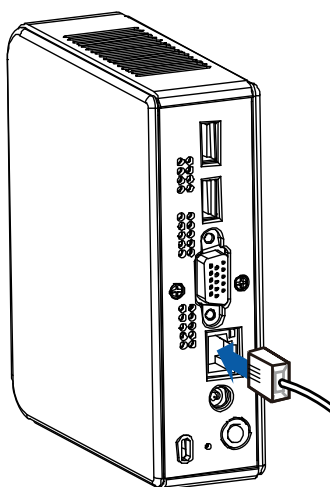


Figure 4 Network cable with RJ45 connector

■ Connecting USB mouse & keyboard

Your QutePC-1010 does not come with a keyboard and mouse, but you can use any USB keyboard or mouse with your computer.

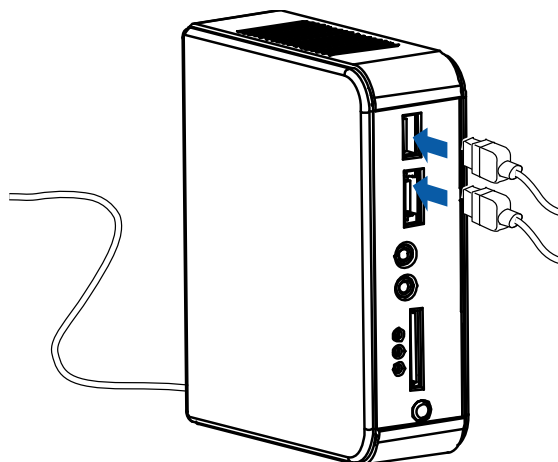


Figure 5 Connecting USB mouse & keyboard

NOTE



Using a third-party USB mouse or keyboard may require software drivers. Check the manufacturer's website for the latest software drivers.

■ Turning on the system

1. Connect the power adapter cable to the DC jack (DC IN) of the QutePC-1010
2. Connect the power cable to the power adapter
3. Connect the power cable to a power outlet
4. Press the power switch on the front panel to turn on the system

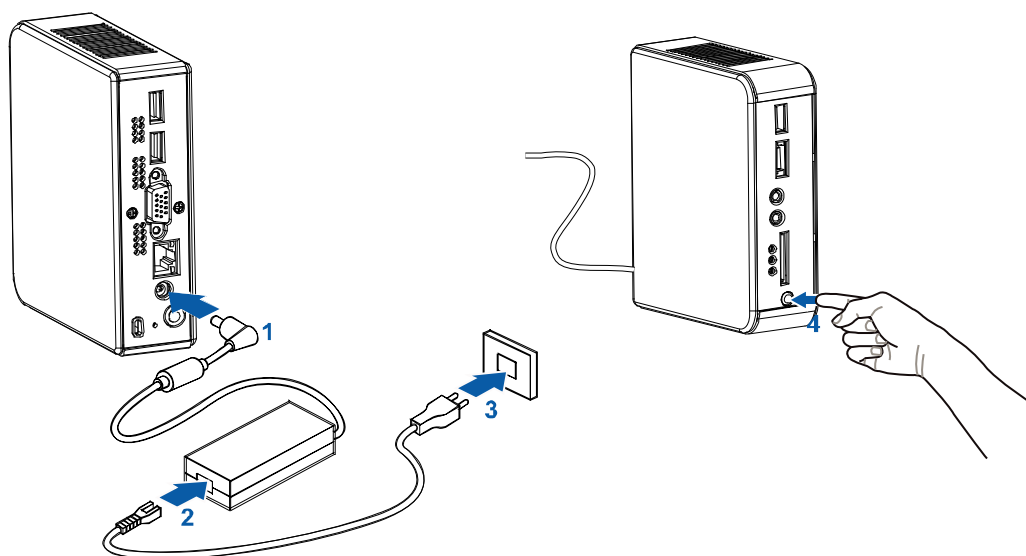


Figure 6 Turing on the system

■ Mounting your PC to a monitor

1. Secure the VESA mounting kit to your monitor with four screws.

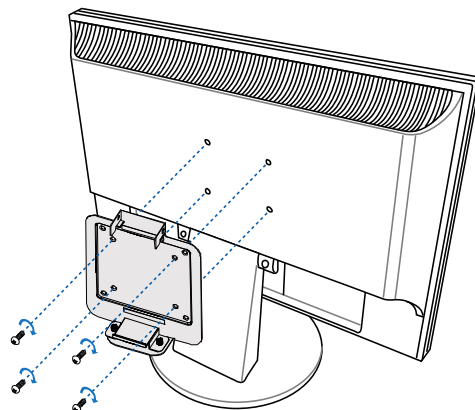


Figure 7 VESA mounting (1)

NOTE



To fasten the metal shelf, your monitor must comply with VESA75 or VESA100 standard. The VESA mounting kit is optional.

2. Place the QutePC-1010 on the VESA mounting bracket.
3. Make sure the air vents are hooked by the VESA mounting bracket and QutePC-1010 is solidly secured to the display.

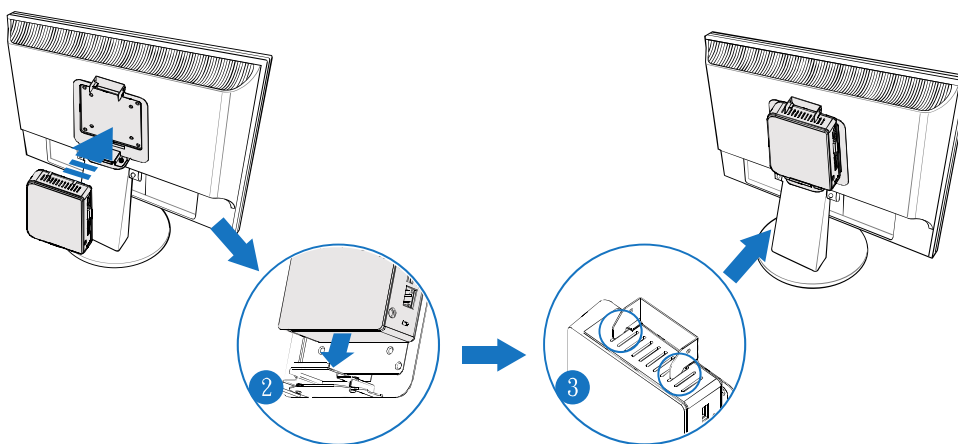



Figure 8 VESA mounting (2)

NOTE



When mounting the unit on the wall with a display. The total weight of the unit and display won't exceed 7 Kg.

VESA Mounting Kit Dimension

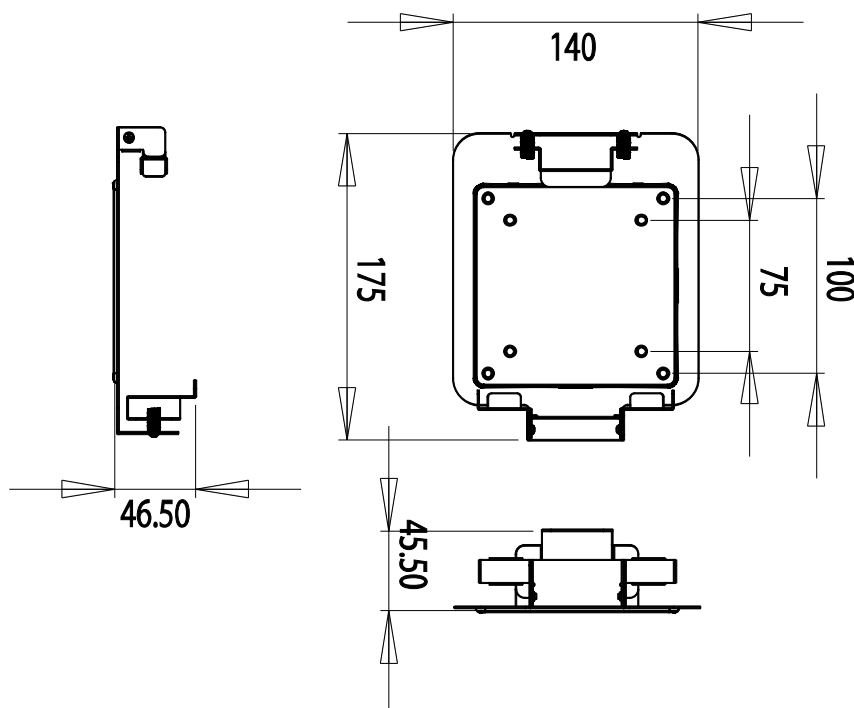

■ Anti-theft protection with a Kensington Lock

The QutePC-1010 has a Kensington lock slot for the Kensington MicroSaver. With the Kensington MicroSaver, a sturdy steel cable, you can attach your QutePC-1010 to a stationary object and protect your PC from theft.

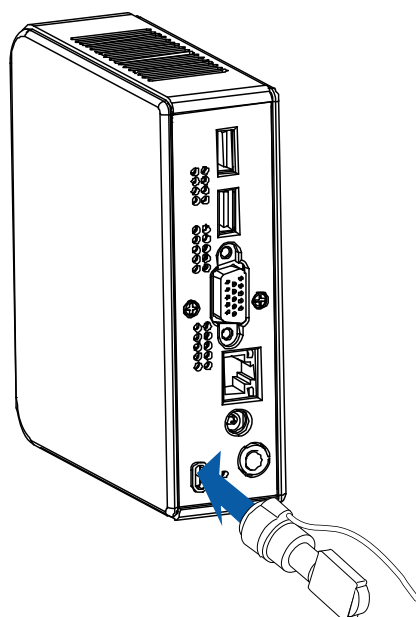


Figure 9 Use a Kensington lock

■ Computer Stand

Use the stand to position the computer to your preference and for stability to the computer. Please do not block the ventilation holes and be sure to leave sufficient space around the unit for ventilation.

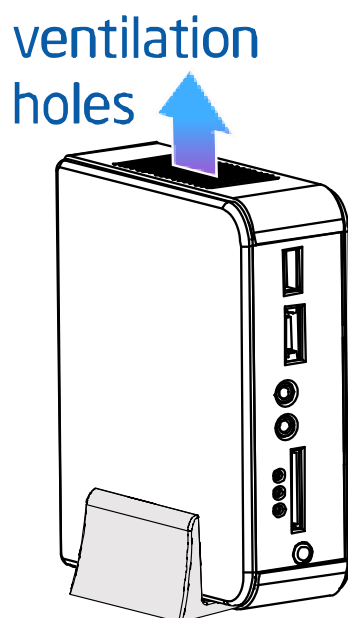


Figure 10 Computer Stand

Computer Stand Dimension

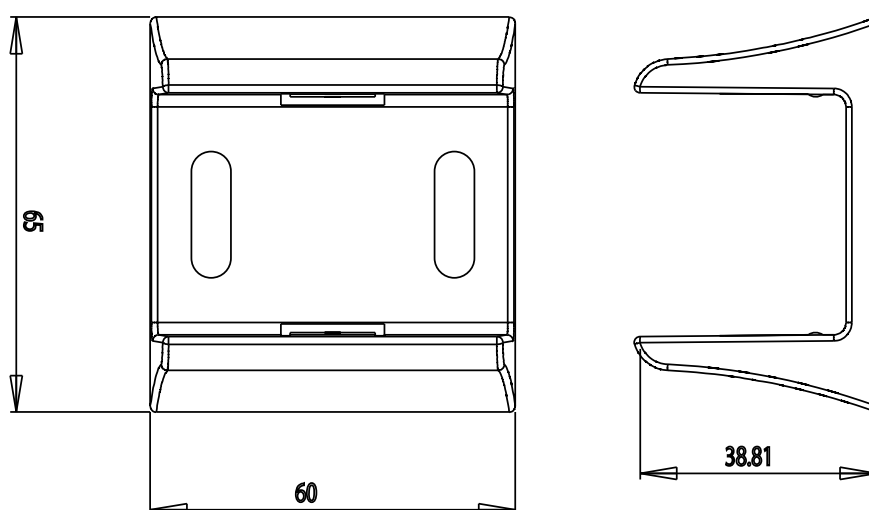


Figure 11 Stand Dimension

■ Driver Installation

If your QutePC-1010 does not come with an operating system pre-installed, you will need to install an operating system and the necessary drivers to operate it. After you have finished assembling your system and connected the appropriate power source, power it up using the power supply and install the desired operating system.

Please contact with your nearest Sales representative for drivers download availability.

Chapter 3

AMI BIOS Setup

■ Overview

This chapter provides a description of the AMI BIOS. The BIOS setup menus and available selections may vary from those of your product. For specific information on the BIOS for your product, please contact us.



NOTE: The BIOS menus and selections for your product may vary from those in this chapter. For the BIOS manual specific to your product, please contact us.

AMI's ROM BIOS provides a built-in Setup program, which allows the user to modify the basic system configuration and hardware parameters. The modified data will be stored in a battery-backed CMOS, so that data will be retained even when the power is turned off. In general, the information saved in the CMOS RAM will not need to be changed unless there is a configuration change in the system, such as a hard drive replacement or when a device is added.

It is possible for the CMOS battery to fail, which will cause data loss in the CMOS only. If this happens you will need to reconfigure your BIOS settings.

■ Main Menu

The BIOS Setup is accessed by pressing the DEL key after the Power-On Self-Test (POST) memory test begins and before the operating system boot begins. Once you enter the BIOS Setup Utility, the Main Menu will appear on the screen. The Main Menu provides System Overview information and allows you to set the System Time and Date. Use the “<” and “>” cursor keys to navigate between menu screens.

Table 2 BIOS Main Menu

BIOS SETUP UTILITY						
Main	Advanced	Boot	Chipset	Power	Security	Exit
System Date System Time > SATA 1 > E-SATA > System Information					Use [ENTER], [TAB] or [SHIFT-TAB] to select a field. Use [+] or [-] to configure system Time. <> Select Screen ↑↓ Select Item +- Change Field Tab Select Field F1 General Help F10 Save and Exit ESC Exit	
V02.61 (C)Copyright 1985-2006, American Megatrends, Inc.						

Below table is described for SATA1 and E-SATA setting.

Table 3 IDE Device Setting Menu

BIOS SETUP UTILITY		
Main		
Primary Master		Disable: Disables LBA Mode. Auto: Enables LBA Mode if the device supports it and the device is not already formatted with LBA Mode disabled.
Device	:Hard Disk	
Vendor	:WDC 1600BEVT-00ZCT0	
Size:	:160.0GB	
LBA/ Large Mode [Auto]		
DMA Mode	[Auto]	<> Select Screen ↑↓ Select Item + - Change Field Tab Select Field F1 General Help F10 Save and Exit ESC Exit
S.M.A.R.T	[Auto]	
V02.61 (C)Copyright 1985-2006, American Megatrends, Inc.		

LBA/ Large Mode [Auto]

Enables or disables the LBA (Logical Block Addressing)/ Large mode. Setting to Auto enables the LBA mode if the device supports this mode, and if the device was not previously formatted with LBA mode disabled.

Options: Disabled, Auto

DMA Mode [Auto]

Options: Auto

S.M.A.R.T [Auto]

SMART stands for Smart Monitoring, Analysis, and Reporting Technology. It allows AMIBIOS to use the SMART protocol to report server system information over a network.

Options: Auto, Disabled, Enabled

Table 4 System Information

BIOS SETUP UTILITY	
Main	
AMIBIOS	
Version : 0.07	
Build Date: :01/14/10	
Processor	
Intel® Atom™ CPU K510 @ 1.66GHz	
Speed :1666MHz	
Physical Memory	
Size :2048MB	
Speed :667MHz	
<> Select Screen ↑↓ Select Item +/- Change Field Tab Select Field F1 General Help F10 Save and Exit ESC Exit	
V02.61 (C)Copyright 1985-2006, American Megatrends, Inc.	

■ Advanced Menu

Table 5 Advanced Menu

BIOS SETUP UTILITY						
Main	Advanced	Boot	Chipset	Power	Security	Exit
Advanced Settings > OnBoard Peripherals Configuration > Hardware Health Configuration						
						<> Select Screen ↑↓ Select Item +/- Change Field Tab Select Field F1 General Help F10 Save and Exit ESC Exit
V02.61 (C)Copyright 1985-2006, American Megatrends, Inc.						

Press <Enter> to select a sub-menu for detailed options.

Table 6 OnBoard Peripherals Configuration Settings

BIOS SETUP UTILITY		
Advanced		
OnBoard Peripherals Configuration Settings		
USB Controller	[Enabled]	Options
USB 2.0 Controller	[Enabled]	Disabled
USB 2.0 Controller Mode	[HiSpeed]	Enabled
USB Device Legacy Support	[Enabled]	
Audio Controller	[Auto]	<> Select Screen
Onboard LAN Controller	[Enabled]	↑↓ Select Item
Onboard LAN OPTROM	[Disabled]	+ - Change Field
> Onboard ATA Devices		Tab Select Field
		F1 General Help
		F10 Save and Exit
		ESC Exit
V02.61 (C)Copyright 1985-2006, American Megatrends, Inc.		

USB Controller [Enabled]

Options: Enabled, Disabled

USB 2.0 Controller [Enabled]

Options: Enabled, Disabled

USB 2.0 Controller Mode [HiSpeed]

Configures the USB 2.0 controller in HiSpeed (480Mbps) or FullSpeed(12Mbps)

Options: HiSpeed, FullSpeed

USB Device Legacy Support [Enabled]

Options: Enabled, Disabled, Auto

Audio Controller [Auto]

Options: Disabled, Auto

Onboard LAN Controller [Enabled]

Options: Enabled, Disabled

Onboard LAN OPTROM [Disabled]

Options: Disabled, Enabled

> Onboard ATA Devices

SATA Controller [Enabled]

Options: Disabled, Enabled

Configure SATA as [IDE]

Options: IDE, AHCI, Disabled

Table 7 Hardware Health Configuration

BIOS SETUP UTILITY		
Advanced		
Hardware Health Display		<> Select Screen ↑↓ Select Item +- Change Field Tab Select Field F1 General Help F10 Save and Exit ESC Exit
CPU Shutdown Temperature	[Disabled]	
CPU Temperature	:51°C/ 122°F	
Fan Speed	:3066 RPM	
+VCORE	:1.168 V	
+3.3V	:3.312 V	
+5V	:5.090 V	
Input	:19.997V	
V02.61 (C)Copyright 1985-2006, American Megatrends, Inc.		

CPU Shutdown Temperature

Options: Disabled, 80°C/176°F, 85°C/185°F, 90°C/194°F, 95°C/203°F

■ Boot Menu

Table 8 Boot Menu

BIOS SETUP UTILITY						
Main	Advanced	Boot	Chipset	Power	Security	Exit
Boot Settings > Boot Device Priority > Hard Disk Drives Quick Boot [Enabled] Full Screen LOGO Display [Enabled] Bootup Num-Lock [ON] Wait For 'F1' If Error [Enabled] Hit 'DEL' Message Display [Enabled]					Specifies the Boot Device Priority sequence. <> Select Screen ↑↓ Select Item + - Change Field Tab Select Field F1 General Help F10 Save and Exit ESC Exit	
V02.61 (C)Copyright 1985-2006, American Megatrends, Inc.						

Boot Device Priority

The items allow you to specify the Boot Device Priority sequence.

Quick Boot [Enabled]

Enabling this item allows BIOS to skip some Power On Self Tests (POST) while booting to decrease the time needed to boot the system. When set to [Disabled], BIOS performs all the POST items.

Options: Disabled, Enabled

Full Screen LOGO Display [Enabled]

Options: Disabled, Enabled

Bootup Num-Lock [On]

Allow you to select the power-on state for the NumLock.

Options: Off, On

Wait for 'F1' If Error [Enabled]

When set to Enabled, the system waits for F1 key to be pressed when error occurs.

Options: Disabled, Enabled

Hit 'DEL' Message Display [Enabled]

When set to Enabled, the system displays the message 'Press DEL to run Setup' during POST.

Options: Disabled, Enabled

■ Chipset Menu

Table 9 Chipset Menu

BIOS SETUP UTILITY						
Main	Advanced	Boot	Chipset	Power	Security	Exit
Chipset Settings Initiate Graphic Adapter [IGD] Internal Graphics Mode Select [Enabled, 8MB] Hyper Threading Technology [Enabled] > Video Function Configuration					<> Select Screen ↑↓ Select Item + - Change Field Tab Select Field F1 General Help F10 Save and Exit ESC Exit	
V02.61 (C)Copyright 1985-2006, American Megatrends, Inc.						

Initate Graphic Adapter [IGD]

Select which graphics controller to use as the primary boot device.

Options: IGD, PCI/IGD, PCI/PEG, PEG/IGD, PEG/PCI

Internal Graphics Mode Select

Select the amount of system memory used by the Internal graphics device.

Options: Enabled 8M

Hyper Threading Technology

Options: Disabled, Enabled

> Video Function Configuration**DVMT Mode Select**

Options: Fixed Mode, DVMT Mode

DVMT/FIXED Memory

Options: 128MB, 258MB, Maximum DVMT

■ Power Menu

Table 10 Power Menu

BIOS SETUP UTILITY						
Main	Advanced	Boot	Chipset	Power	Security	Exit
Power Management Setting					Select the ACPI state used for System Suspend <> Select Screen ↑↓ Select Item +- Change Field Tab Select Field F1 General Help F10 Save and Exit ESC Exit	
ACPI Function			[Enabled]			
Suspend mode			[S3 (STR)]			
Repost Video on S3 Resume			[No]			
Restore on AC Power Loss			[Power Off]			
USB Power Status			[5V]			
Resume From S3 By USB Device			[Disabled]			
Resume By Onboard LAN			[Disabled]			
Resume On RTC Alarm			[Disabled]			
V02.61 (C)Copyright 1985-2006, American Megatrends, Inc.						

ACPI Function [Enabled]

Enable/ Disable ACPI support for Operating System.

ENABLE: If OS supports ACPI, DISABLE: IF OS Does not support ACPI.

Suspend mode [S3 (STR)]

Options: S1 (POS), S3 (STR)

Repost Video on S3 Resume [No]

Determines whether to invoke VGA BIOS post on S3/STR resume.

Options: No, Yes

Restore On AC Power Loss [Power Off]

Options: Power Off, Power On, Last State

USB Power Status [5V]

Options: 5V, 5VSB

Resume From S3 By USB Devices [Disabled]

Options: Disabled, Enabled

Resume By Onboard LAN [Disabled]

Options: Disabled, Enabled

Resume On RTC Alarm [Disabled]

Options: Disabled, Enabled

■ Security Menu

Table 11 Security Menu

BIOS SETUP UTILITY						
Main	Advanced	Boot	Chipset	Power	Security	Exit
Security Setting Supervisor Password :Not Installed User Password :Not Installed Change Supervisor Password Change User Password					Install or Change the password. <> Select Screen ↑↓ Select Item +- Change Field Tab Select Field F1 General Help F10 Save and Exit ESC Exit	
V02.61 (C)Copyright 1985-2006, American Megatrends, Inc.						

Change Supervisor Password

Select this item to set or change the supervisor password. The Supervisor Password item on top of the screen displays the default Not Installed. After you have set a password, this item displays Installed.

Change User Password

Select this item to set or change the user password. The User Password item on top of the screen displays the default Not Installed. After you have set a password, this item displays Installed.

■ Exit Menu

Table 12 Exit Menu

BIOS SETUP UTILITY						
Main	Advanced	Boot	Chipset	Power	Security	Exit
Exit Setting Save Changes and Exit Discard Changes and Exit Discard Changes Load Optimal Defaults Load Failsafe Defaults					Exit System Setup after saving the changes. F10 key can be used for this operation. <> Select Screen ↑↓ Select Item + - Change Field Tab Select Field F1 General Help F10 Save and Exit ESC Exit	
V02.61 (C)Copyright 1985-2006, American Megatrends, Inc.						

Save Changes and Exit

Exit system setup after saving the changes. Once you are finished making your selections, choose this option from the Exit menu to ensure the values you selected are saved to the CMOS RAM. The CMOS RAM is sustained by an onboard backup battery and stays on even when the PC is turned off. When you select this option, a confirmation window appears. Select [Yes] to save changes and exit.

Discard Changes and Exit

Exit system setup without saving any changes. Select this option only if you do not want to save the changes that you made to the Setup program. If you made changes to fields other than system date, system time, and password, the BIOS asks for a confirmation before exiting.

Discard Changes

Discards changes done so far to any of the setup values. This option allows you to discard the selections you made and restore the previously saved values. After selecting this option, a confirmation appears. Select [Yes] to discard any changes and load the previously saved values.

Load Optimal Defaults

Load Optimal Default values for all the setup values. This option allows you to load optimal default values for each of the parameters on the Setup menus, which will provide the best performance settings for your system. The F9 key can be used for this operation.

Load Failsafe Defaults

Load Optimal Default values for all the setup values. This option allows you to load failsafe default values for each of the parameters on the Setup menus, which will provide the most stable performance settings. The F8 key can be used for this operation.